



Clutch Change - GSP100650 and GSP100655

Equipment Needed:- 3mm Pin Punch and a Small Hammer.

To change the clutches on your Golf trolley you will need to follow the following instructions.

1. Remove the wheel placing the wheel under the shaft to support the machine whilst leaving you access to the end of the shaft and the clutch.
2. Carefully knock out the roll pin that holds the clutch onto the shaft using your punch and hammer, mind your fingers and be careful to keep the punch directly on the pin.
3. Remove the old clutch by sliding it off the shaft.
4. When fitting a clutch to your machine it is important to remember that clutches are handed, at GolfStream our left hand clutch has a **Red** insert and our right hand clutch has a **Blue** insert. (Left and right orientation based on you viewing the trolley from the handle).
5. Slide the new clutch onto the shaft and line the hole on the clutch up with the hole in the shaft.
6. Tap the roll pin into the hole and use the pin punch to fully insert the roll pin
7. Replace the wheel onto the shaft ensuring the drive pins on the clutch fit fully home into the holes on the inner side of the wheel.

GolfStream International Limited, Lakesview Business Park, Canterbury, Kent. CT3 4JH

Telephone: 01227 713173

Fax: 01227 719884

E-Mail: sales@golfstream.co.uk

Website: www.golfstream.co.uk