

GOLF | STREAM

OWNERS INSTRUCTIONS

Your new Vision is packed full of features:

- Unique one touch fold/unfold makes the VISION the simplest to use as well as folding flatter than leading competitors.
- Revolutionary Caddy White display screen can be viewed in any light including full sun. Can also be personalised.
- Easy-off main wheels with slick, low profile, high grip PU tyres which last up to 5 times longer than standard tyres.
- Distance control and programmable left/right handed operation. Speed settings in 0.5 increments to perfectly match your pace.
- Simplicity mode for those who want a trolley without the fancy extras.
- Supplied with Caddycell LiFePO4 battery as standard.
- Designed in the UK to offer years of reliable on course action.
2 year parts and labour guarantee.



Vision
The difference
is clear

The Golfstream Vision trolley is one of the lightest and easy to fold/unfold golf trolleys on the market today. It has a specifically designed E-Reader display that means you can read it easily in any light, even full sun.

With slick high grip tyres, easy off wheels and a no-twist system to hold your bag in place, you will find that you have made a fantastic buying decision.

IN THE BOX

In the box you will find your Golfstream Vision, battery and charger. Take the battery and charger out and put them on charge by plugging the charger into the battery and battery into the mains, making sure the red charging light is illuminated. Once the light goes green your trolley is ready for use.

Now take a minute or two to register your guarantee at www.golfstream.co.uk/guarantee and keep your original receipt in a safe place so that in the unlikely need of a claim you have everything to hand.

QUICK START

1. Before your first opening of the Vision please unwrap the bungee cords that were wrapped around in manufacture. Now lift the handle into the fully erect position, the central catch will lock with a reassuring click.
2. Now, if using the supplied Caddycell battery, plug the adaptor cable into the socket on the power platform – we anticipate that in most cases you will leave this plugged in permanently. Plug the T piece into the battery noting it can only go in one way. The screen has now changed from "VISION" to "0:0" flashing. Press the on off button down and the flashing will go solid, power is now available to the motor, rotating the on/off knob will set the machine into action.

Once you have these basics, add the golf bag and away you go.

For a more in depth explanation of your new Vision trolley, please read on.

When carrying the machine lift from the area highlighted in the image, the magnetic catch will prevent it from flying open. Lay the trolley flat and lift from the handle, the magnet will be released and you can extend the handle upwards until it clicks into place.


Add the battery and your Vision is ready for action.

When you plug in your Vision the logo will be replaced with 0.0 flashing. This is the speed indicator, whilst it is flashing no power is offered to the motor.

Rotating the control knob will change the display in 0.5 increments allowing you to choose the exact speed to match your walking pace.



PRESS ONCE

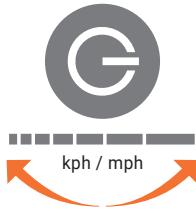

A single press of the control knob will offer power to the motor at the selected speed, speed can be controlled with the control knob.

Press the control knob to stop the trolley and the display will revert to flashing.

Please note that on a downward slope there is the potential for the machine to carry on moving through momentum. When stopped park so that the machine will not freewheel downhill.

Your vision has super grip slick PU tyres that will offer far more grip and around 5 times the wear of a traditional golf trolley wheel.

PRESS & HOLD 2 sec



DISTANCE CONTROL

Your Vision trolley comes with a Distance Control function allowing you to send your trolley off on its own for **10, 20 or 30 metres** (*approx.*) Sometimes it can be useful to send your machine off towards the next Tee whilst you putt out.

To access DC Mode press and hold the control knob for 2 seconds, DC will appear. Whilst DC is showing, rotate the control knob to cycle between 10, 20 and 30. Press the control knob down when the distance required appears on the screen. Your machine will then proceed at speed 6.0 and the display will count down. You can stop the machine by pressing the control knob.



BATTERY INDICATOR

Your Vision comes with a battery indicator on the top left of the main screen – this will give you an indication of how much power you have remaining in your battery. Please note – in Simplicity/Competition Mode the battery indicator will not show.



PROGRAMMING MODE

With the power on and 0.0 flashing press and hold the on/off knob down for 10 seconds until “Program” is displayed. By rotating the control knob you will scroll between “Simple”, “Normal”, “Hand”, “Name”, “Clock” and “Exit” functions.

NAME – Here you can change the VISION logo on the home screen to be your name or your nick name. You can have letters in two rows of 8. You can centre the text by choosing a blank or two before you start. The relevant digit will flash; rotating the control knob will change the digits, press to save and move on.

NORMAL

SIMPLE / NORMAL – This facility enables you to get rid of any “bells and whistles” that you really don’t want leaving just simple stop/star faster/slower controls. Select Simple and hold for 3 seconds to save. You can revert to normal mode by going through the procedure again and selecting “Normal”.

LH / RH

HAND – If you are left handed you will want to select LH, this will reverse how the rotary control knob works so that faster is anticlockwise and slower is clockwise. Press and hold to save the LH or RH option.

— : — —

CLOCK – Select clock and flashing numerals will appear. Rotate the control knob to alter hours and minutes, pressing the knob to save changes.

EXIT

EXIT – Select exit to come out of programming mode.



LIFTING – When lifting your Vision into the boot of your car lift from the outer arm close to the main wheel. Pick up without a “tug” so that the magnetic catch is not deactivated and keeps the handle section from flaying out.



HILLS – Your Vision has super grip PU tyres however, if you ramp up the speed quickly you will be able to spin the wheels, just like a car really. So particularly on hills, move the speed control gradually to gain maximum grip.

WARNINGS: Under excessive pressure your machine may show “Over Current Please Reset” if this happens simply unplug and re-plug the battery – if it persists please contact Golfstream.

If the main screen doesn’t revert to VISION (or your chosen main screen) when the battery is unplugged your screen battery needs to be replaced, the machine will still work normally when plugged in. However please contact Golfstream. If your Vision shows “Failed Authentication” please unplug and try again – after this please contact Golfstream.

GET ME HOME GROOVE: Should you ever need to; the wheels can be moved into an outer disengaged position that will allow the machine to be pushed very easily. Simply press in the sprung hub cap whilst pulling the wheel away from the trolley until it locates in the outer groove. Repeat with the other side.

GENERAL MAINTENANCE: Occasionally take the wheels off and remove any debris from the axle such as straw or string. Before you put the wheel back on wipe the axle with a greasy rag (tiny smear). Periodically clean the machine with a damp soapy cloth but never jet wash.

COLOURS: If you fancy a change or you want colours to match your football team or outfit you can purchase a colour pack that will transform your machines look in 30 minutes. See www.golfstream.co.uk/visioncolours for details.

GOLF | STREAM

Golfstream Ltd., Wilton Road, Haine Industrial Park, Ramsgate, Kent CT12 5HG
+44 1843 594213 • sales@golfstream.co.uk • www.golfstream.co.uk

GUARANTEE

Your machine is guaranteed for 24 months from date of purchase, so please ensure you register the machine online at www.golfstream.co.uk/guarantee

The battery has a separate longer guarantee, please see the battery guarantee card for details. (excludes internal battery)