



REVOLUTION USER GUIDE




Revolution Quick Start Guide

Thank you for buying the Golfstream Revolution, it has been designed, sourced and built in Britain to give you the ultimate in robustness and reliability, it will give you many many years of service.


In the flat, closed up, position the trolley is automatically locked for carrying. It is best carried by one of the side beams.

1

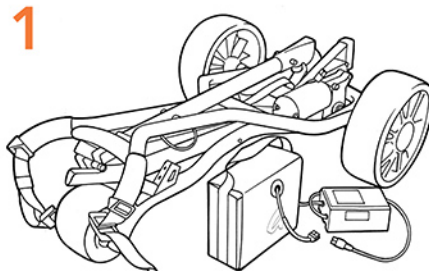


Once unpacked, you will find three main parts.
The trolley, battery and charger.
Before your first game, make sure you fully charge your battery with an overnight charge (Pic 2).


2

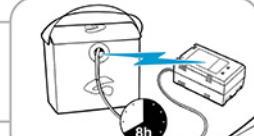

3

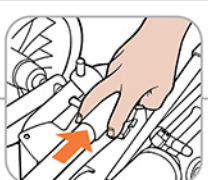

4

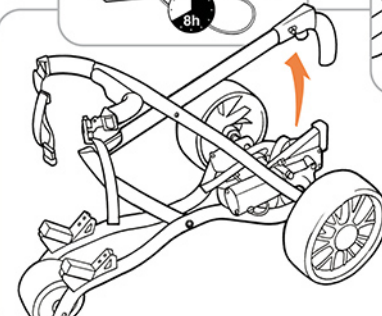

Have your trolley flat on the floor, release the fold down catch (Pic 3), pulling the two release buttons just in front of the handle back towards you as you lift the main handle. Once in the "in use" position the trolley will automatically click into place to make a solid frame.

5



Now connect the battery to the trolley connectors.
Secure your bag by securing the upper bag stay strap.



6




At the handle cockpit you will see a blue LED display. This display is multi-functional and offers the user valuable information. In the "at rest" position the display will flash showing the speed setting but with no power to the motor. Rotating the **on/off** knob will change the speed setting but the display will still flash showing no power to the motor.
Pressing the on/off knob (up) will change the display to a solid display and power will be sent to the motor.

NOTE – It is always better to turn the trolley on when on zero until you have got to know how your machine reacts.

By pressing and holding the on/off switch in for 2 seconds, the display will show you a battery indicator in % format. After 2 seconds the display will revert to the speed setting.

*You now have the basics and can go out for a quick round!
If you would like to know a bit more, see overleaf...*

INSTRUCTIONS

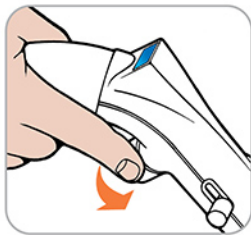

Getting to know your trolley

The trolley is suited for left and right hand operation. If you are left handed please see the section opposite under "programming" so that the accelerator works in the right direction for you.

Whilst gripping the handle use your index finger to rotate the accelerator backwards and forwards. You will see the display change from a low of '0.0' to a high of '9.5' in 0.5 increments. The display will be flashing and no power will be fed to the motor.

With the speed display at '0.0' use your index finger to push the accelerator knob up. This will change the flashing '0.0' to a solid '0.0'. Now rotate the knob forwards and the trolley will start to move. You will use this function to set a comfortable walking speed during your round. At any time you can push the accelerator knob up to stop the machine and the display will revert back to a flashing speed figure.


Battery Voltage Indicator

To view the battery level indicator you should press and hold the control knob for approximately 2 seconds. The display will revert to showing the approximate percentage level remaining in the battery. Once the knob has been released the display will continue to show the percentage for 2 seconds before returning to the previous state.




Distance Function

You can set your Revolution off on its own. This can be useful for sending your trolley from the green to the next tee or if your playing partner is in the rough and needs help to find their ball! Press and hold the control knob for two seconds to display the 'Battery Voltage Indicator' and then a further 2 seconds and an 'F' will flash. Whilst it is flashing, press the knob upwards to select a number between 1 and 5. These numbers are approximately equal to 1 = 8 seconds, 2 = 16 seconds etc. Practise with this as 40 seconds will take your trolley a long way!

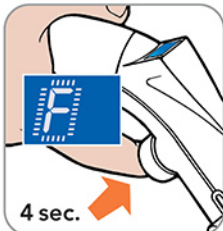



NOTE: Never set your trolley off down a hill in case momentum allows it to go further than you anticipate. Always be mindful of people and objects.

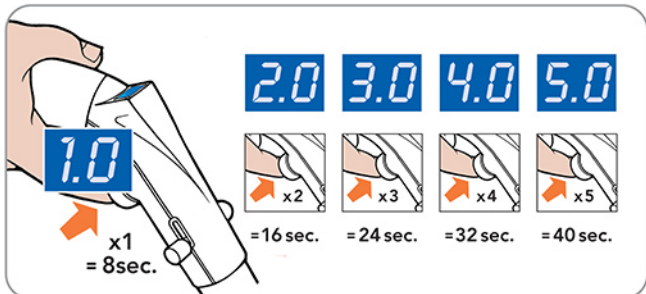

If you have a Golfstream Golf Bag, you will need to remove the front rubber feet near the front mini wheel to expose our specially designed anti-twist locators.

If you have another brand of bag, leave the feet in place.

Put the battery into the battery tray and secure with the battery tray strap.

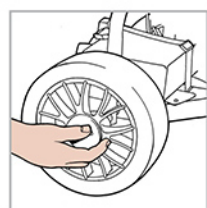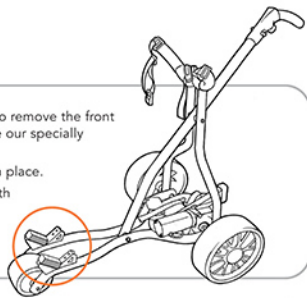

Electronic Brake

If you have chosen to buy a Revolution with brake function, here are your additional instructions.

As you have the brake version your wheels are permanently engaged, you will need to use battery power to move your machine unless you disengage the wheels as shown (left).

Your machine is fitted with a sophisticated limited slip differential gearbox. It is possible that in certain conditions, one wheel or the other, depending on pressure, will slip around. Should this happen, reduce speed from your handle controller until full control is resumed.

In all other respects your machine is the same, however, you have the benefit of a downhill brake. To activate the brake, move the speed control regulator past zero and you will find that -1 appears, this can be increased to -6 depending on the severity of the hill and the users comfort. Always keep your hand on the trolley while in brake mode.

PROGRAMMING

In order for you to get the most from your Golfstream Revolution, we have added some extra functionality that you may find useful. To enter programming mode follow these steps.

The battery should be disconnected. Now hold the On/Off knob in (up) whilst at the same time connecting the battery, hold for 2 seconds until 'Pr' is displayed for programming.

Display Brightness

Your trolley comes set with the display at full brightness, however on a cloudy day you may prefer a less intense light from the blue LED's and your Golfstream Revolution allows you to adjust this.

From the 'Pr' screen release the On/Off knob and 'LE' will be displayed, now move the dial on the knob backwards and forwards to get the desired setting, when you are happy, press the knob up again to set and take you into other options below. If you have finished, disconnect the battery and your settings will be saved.



Right/Left hand

Your trolley comes pre set for right handed people. To make the trolley more suitable for a left handed user so that a forward motion of the left forefinger makes the machine travel forward, please follow these instructions -

As you release the On/Off button from 'LE' the display will change to 'LH' for Left Hand. If you press the knob up once it will show 'rH' for Right Hand, press again and either 'SL' (security lock) or 'SU' (security unlock) will show for security code. Press once more to go back to 'LH'. To select Left Handed use, push up and hold the On/Off button for 2 seconds until the 'LH' flashes. To finalise the set up, disconnect the battery.

Security

You may feel that you would like to secure your trolley from theft or accidental use by others. The trolley is supplied without a security code set. To set a two digit lock that will stop all operation of the trolley until it is set, follow these instructions:-

Enter programming mode as described above. Using the on/off knob, Scroll through 'LH' then 'rH' and finally 'SL' or 'SU'. If the trolley has previously been 'Locked' the option of 'SU' will be given otherwise the 'SL' option will be displayed.

Security Lock

While 'SL' is displayed press and hold the On/Off knob for 2 seconds until the display flashes. The first digit will flash '0', and by using the rotary control select your chosen first number and push the knob upwards to select. The display will now hold the first number and the second digit will display a flashing '0' again, adjust the rotary control to select the second number. Pushing the knob upwards will store the security code and will immediately revert to the 'LH'. To finalise the set up, disconnect the battery.

Security Unlock

To unset the code you will need the original code that you set, if you have lost this you will need to return the machine for resetting at the factory.

To unset a code that has previously been set press and hold the button with 'SU' showing until the display flashes. A flashing '0' will be displayed, select the first digit by rotating the rotary control and push the knob up. The second digit will now flash, select your number using the rotary control and push knob up. You will now see that 'SL' is displayed and your machine no longer has a security code activated. To complete the trolley setting sequence disconnect the battery.

ACCESSORIES



GSP100905

Carry bag to fit most electric trolleys made from high quality nylon canvas this bag will help you to keep your car boot clean and tidy after your wheels have got wet and/or muddy. The high quality zip is dual action to allow easy opening from either end and the two shoulder straps and lower carry handle allows easy transportation. Internal measurements: Height: 85cm Width: 68cm Depth: 32cm



GSP100917

Universal Drink/Sand holder to fit most golf trolleys including those with wider tubes.

GSP100975
Brand new onto the market this securitee hood is combination locked to keep your clubs safe. When in place and secured correctly, your clubs cannot be removed, your bag pockets are covered and the bag cannot be removed from the trolley. Ideal when playing at an unfamiliar club to stop the opportunist thief. Gift boxed.




GSP100995

Keep your driving hand dry and warm with this fleece lined microfibre mitten, fits over the handle of your trolley for a more comfortable winters game. Gift boxed.



GSP100920

 Keep the mud and wet away from you and your car boot with these simple and easy to fit wheel covers. Supplied as 1 pair. Gift boxed.

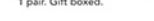

GSP100930

150 cm fully automatic luxury storm proof umbrella with double canopy and reinforced fiberglass shaft. This large 150cm twin canopy will let the strongest of gusts blow through without blowing inside out.



GSP100925

Superior large size Rain Cover to keep your bag and clubs dry in the harshest of weather. It has elasticated edges for a snug fit and strong straps and buckles to attach to your bag firmly. The elasticated top section allows easy access to your clubs. Gift boxed.